



SafetyPro Assembly Instructions

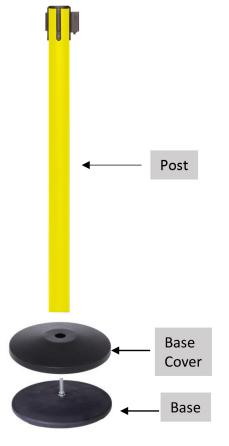

With the base cover in place screw the post onto the base. Make sure the post is screwed down as tightly as possible.

HINT

To make sure the post does not loosen with the base 'touch tight' turn upside down and using a wrench or socket on an electric drill fully tighten the base bolt.

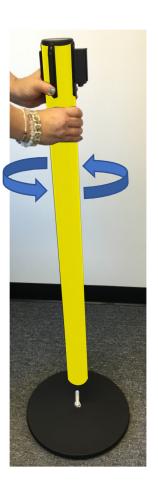

CONNECTING POSTS Extend the belt and slide the belt end onto the receiver spline of the next post



HINT Always leave 12" of belt inside the post to allow for play should the belt be pulled or pushed on.

